


VS10 Upgrade




(1) Download vs10app.tar file from LUMANTEK website

- Please check VS10 folder at USB Disk Drive.
- Please copy vs10app.tar file at VS10 folder
- Please connect USB to VS10 device.

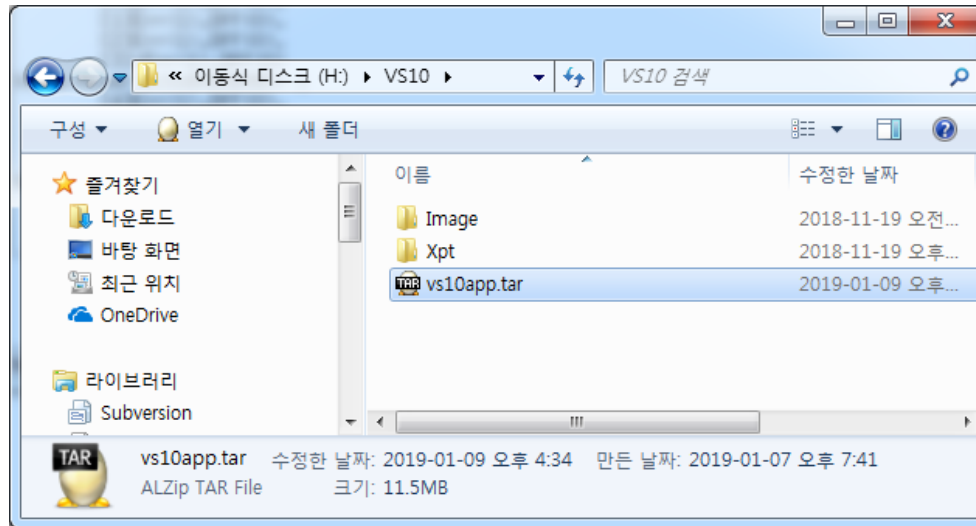


***Please do not make more than two copies of vs10app.tar file at your USB. You must have only "one" vs10app.tar file at your USB Disk Drive. Otherwise VS10 stop working after firmware updating.**

(2) VS10 Upgrade

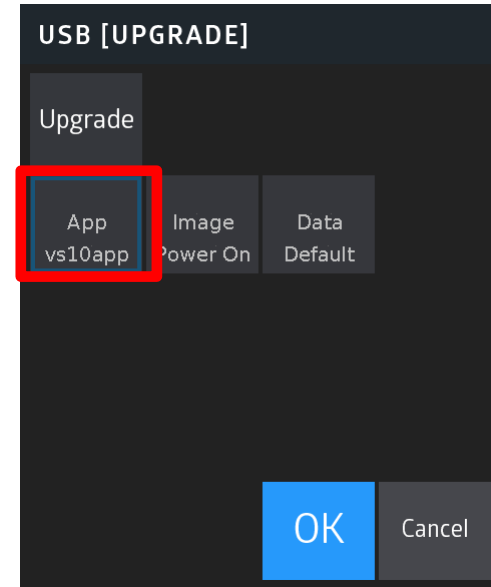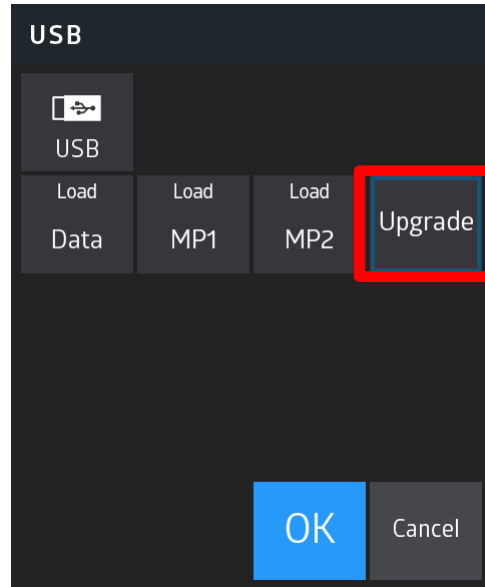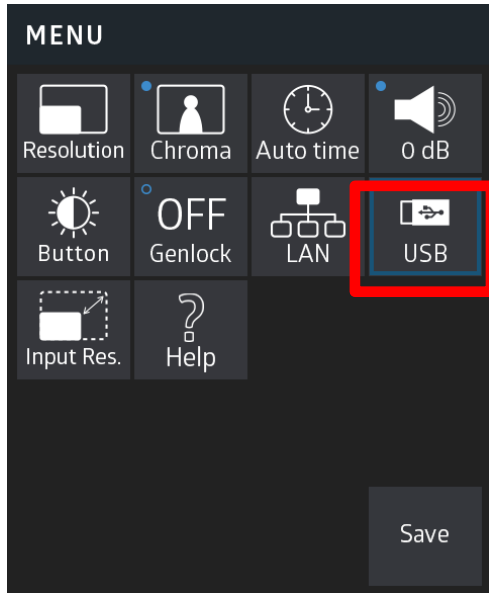


MENU->USB → Upgrade → App(vs10app)

(3) VS10 Upgrade

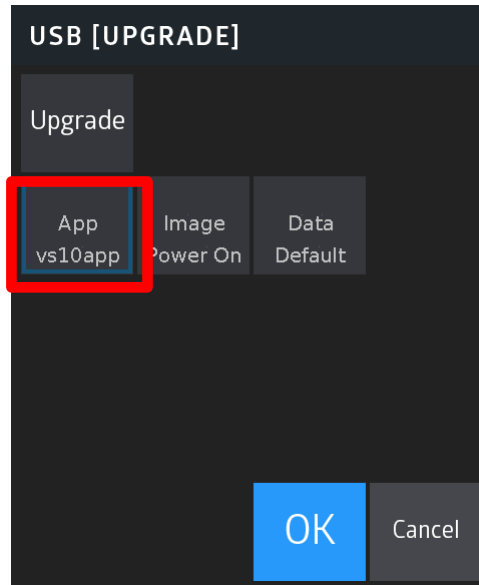


Please OK button, you will see the "copy" is progressing.
Please power off and on after copy is completed

(4) VS10 Power Off -> Power On

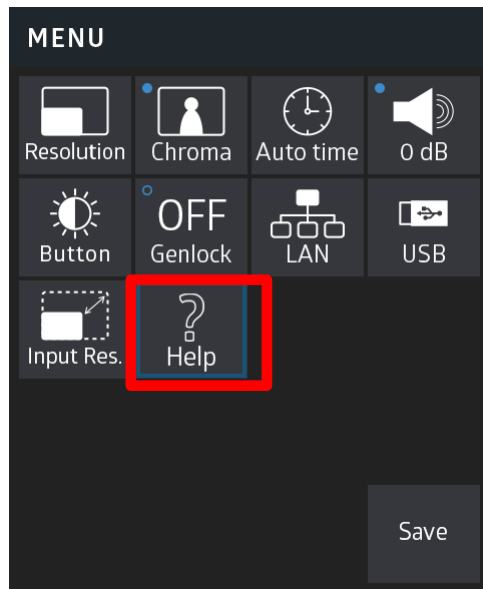

MENU:Help

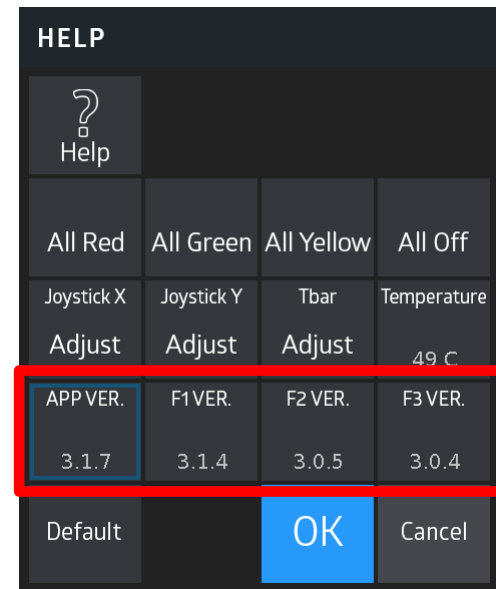

Please check the firmware version